 
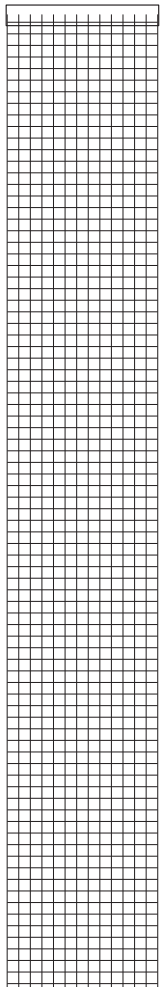 
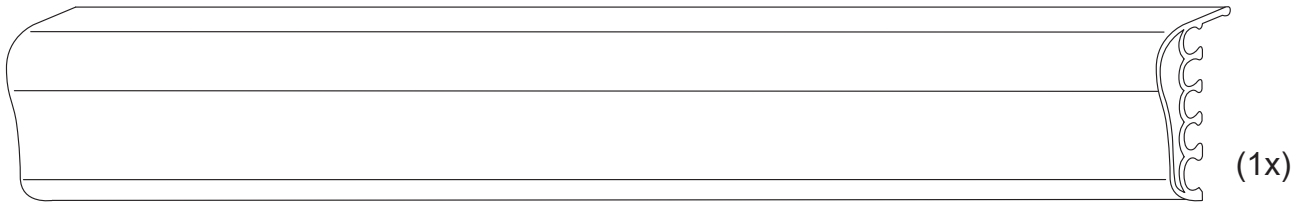 
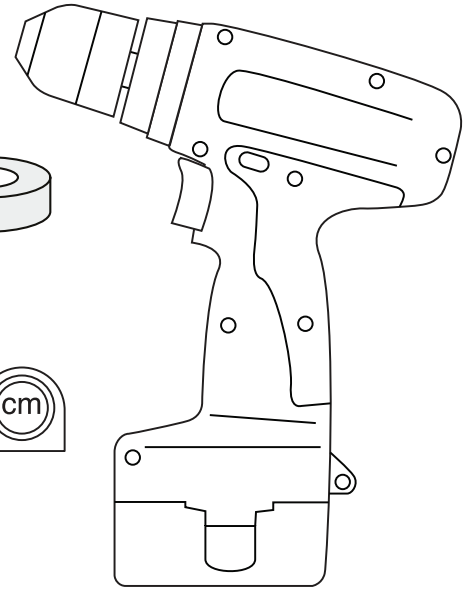 
 
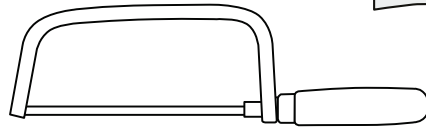 
 
 



# HANDLEIDING GUIDE D'INSTALLATION MANUAL

BENODIGDE GEREEDSCHAPPEN / OUTILS REQUIS / TOOLS

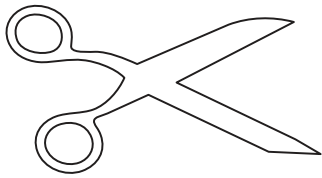


(4x / 5x\*)  
276653

 
(service LHG7611)

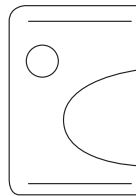


(1x)  
LHM502

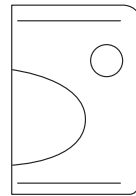 

(1x)  
LHM503

 

(2x)  
3,9x38 mm

 

(8x / 10x\*)  
HTV516



(2x)  
LHM511



 
(1x)  
2,9x6,5 mm




(1x)







(2x)  
LHM665






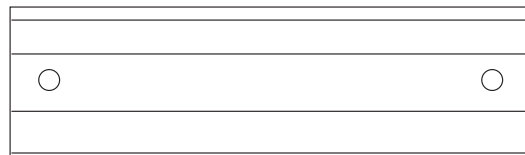




(4x / 5x\*)  
276651

 






(8x / 10x\*)  
HTV511

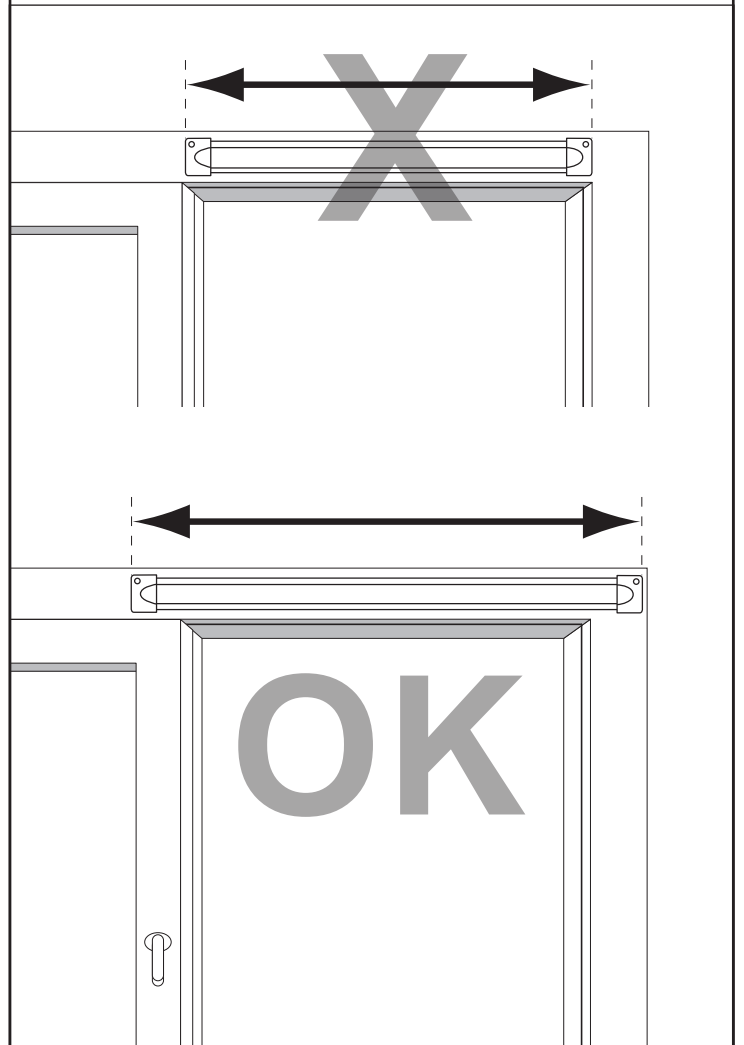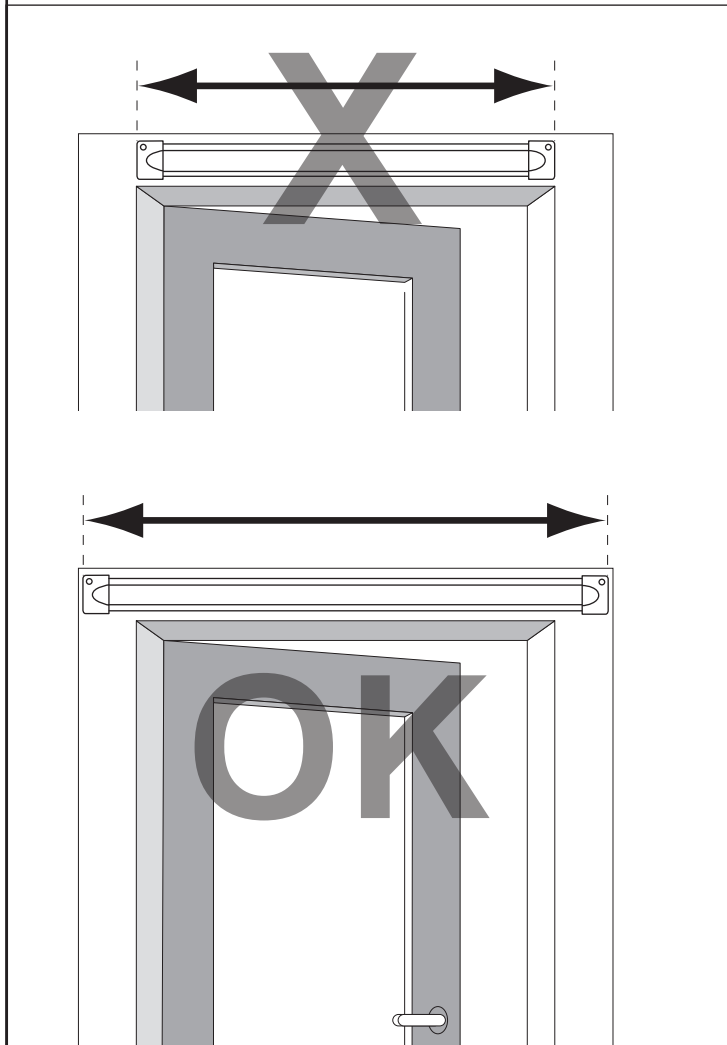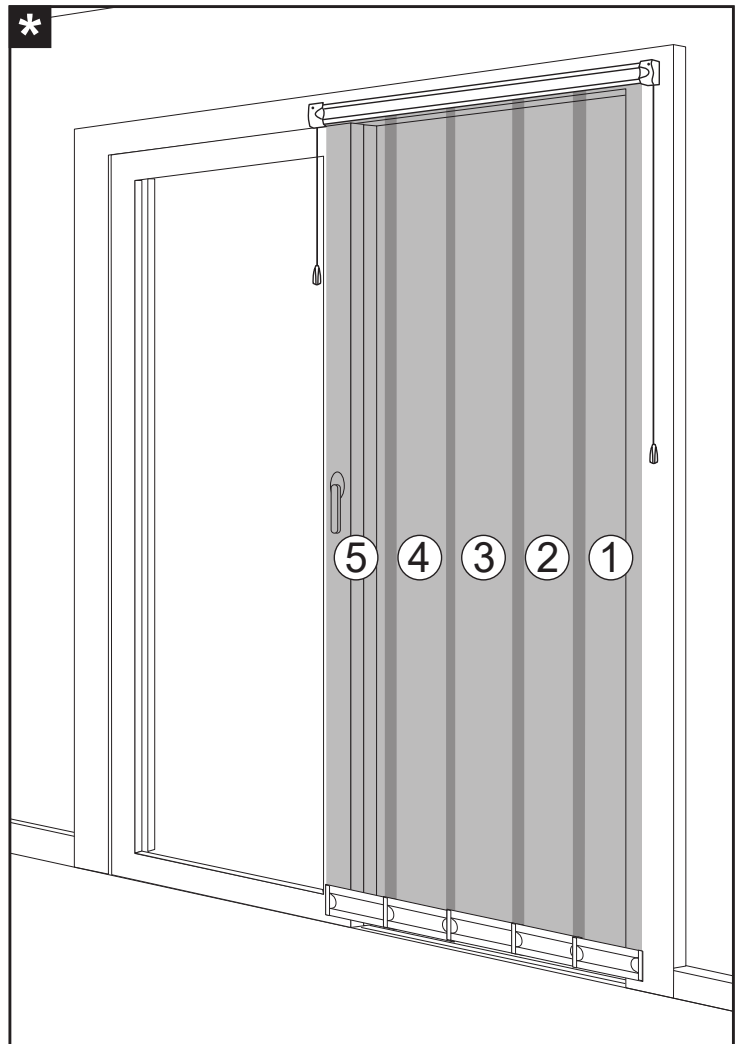   
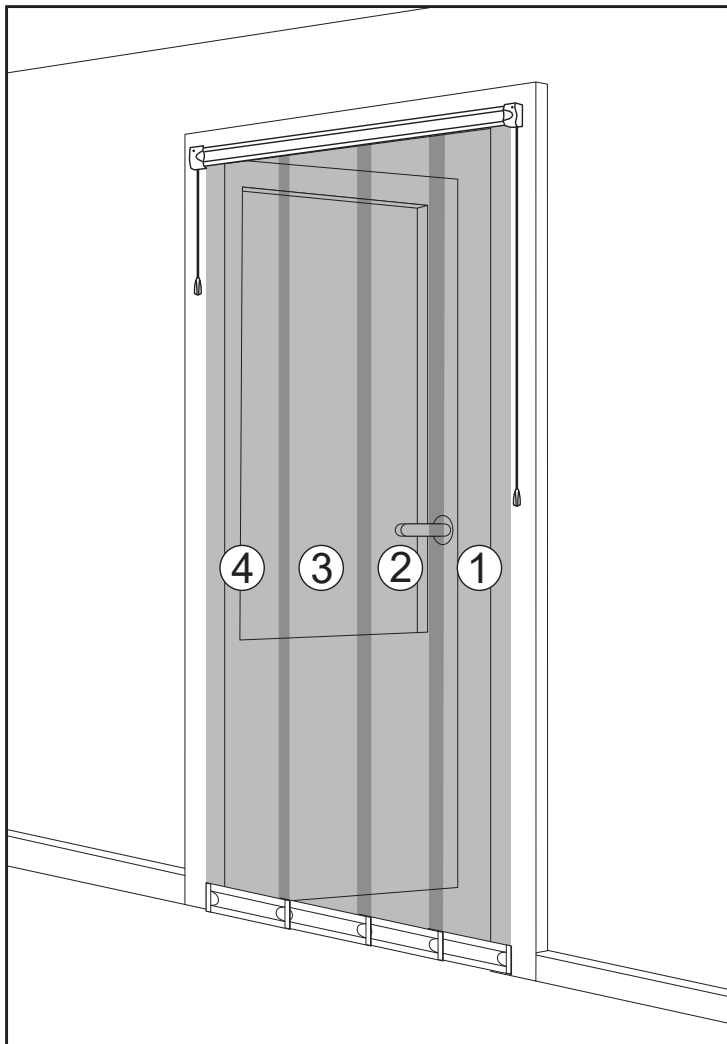 


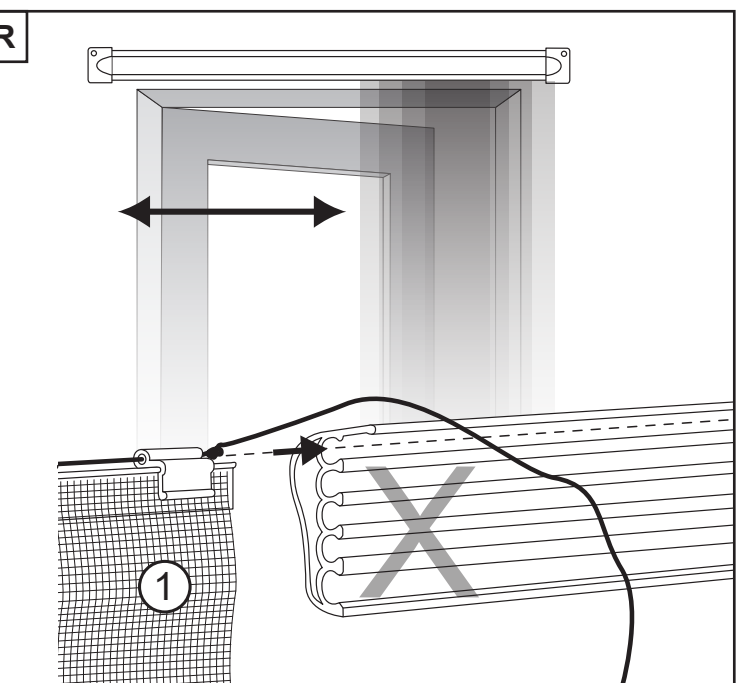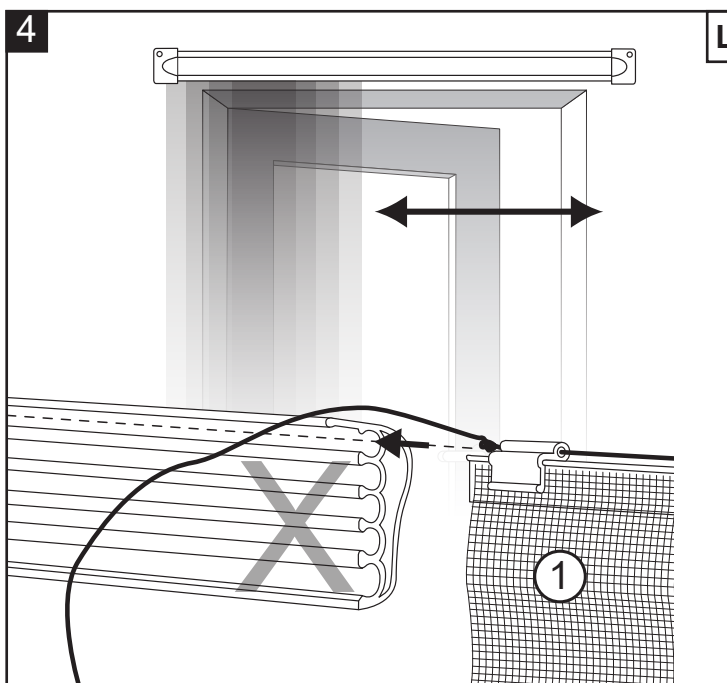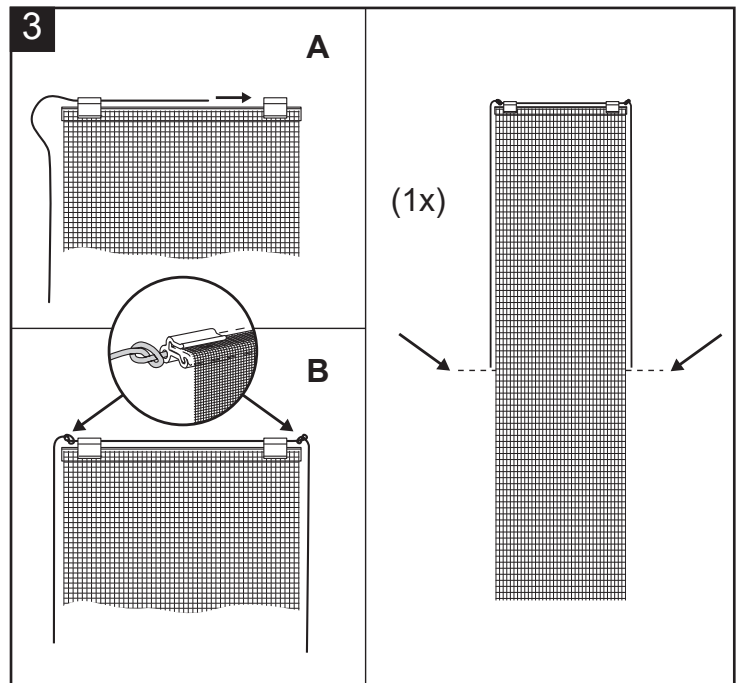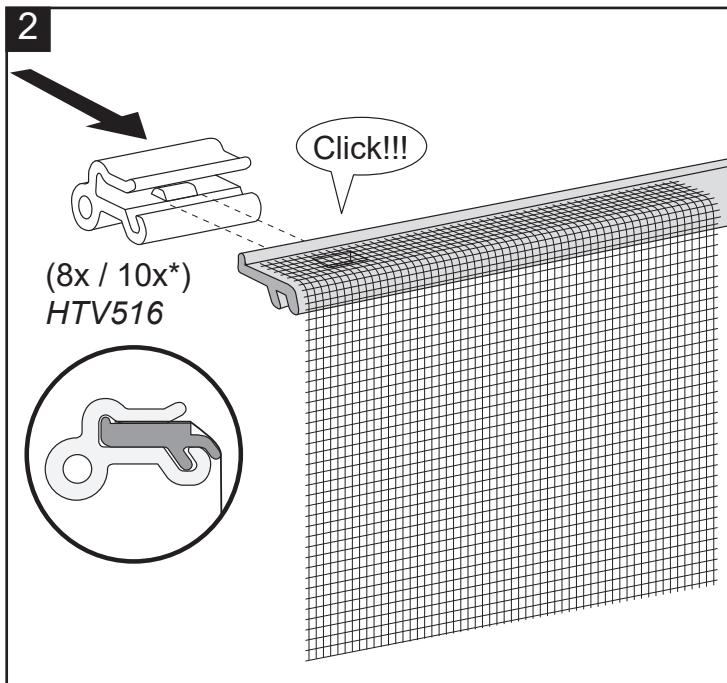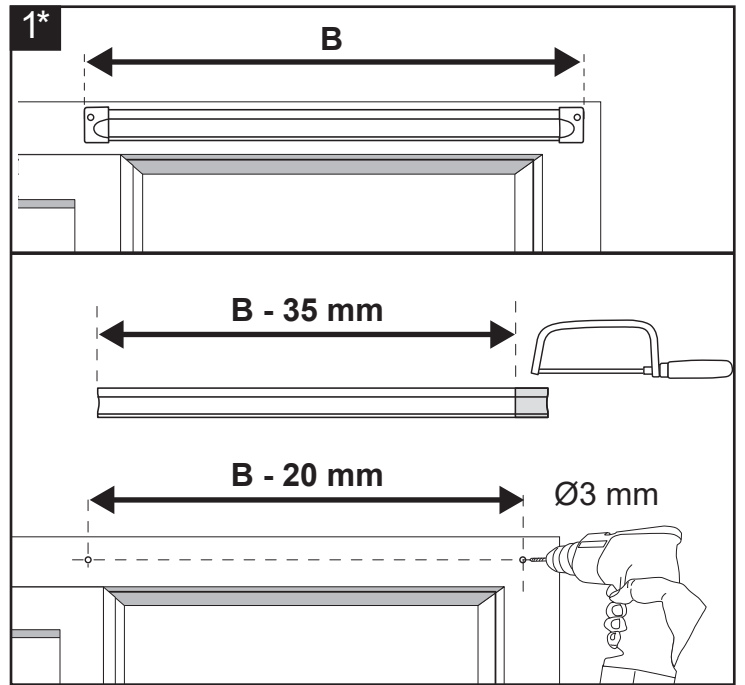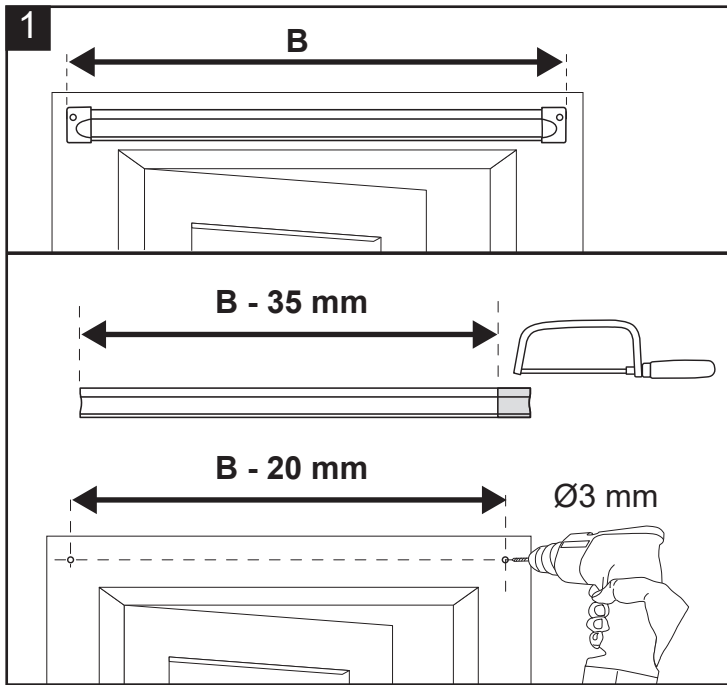      

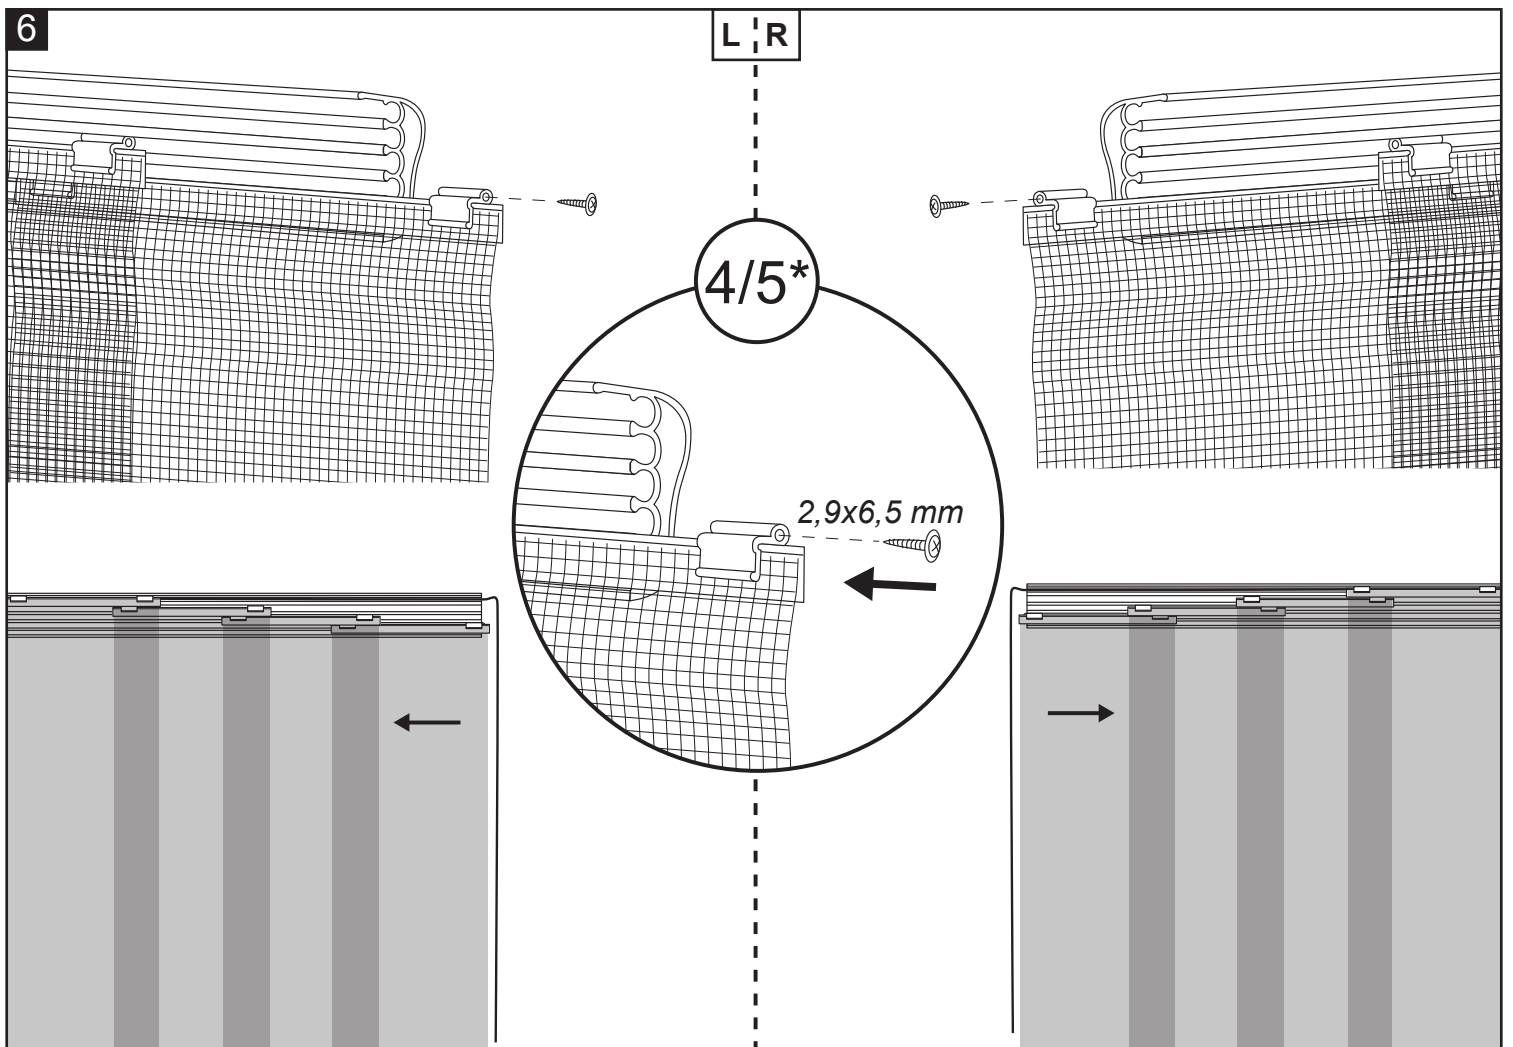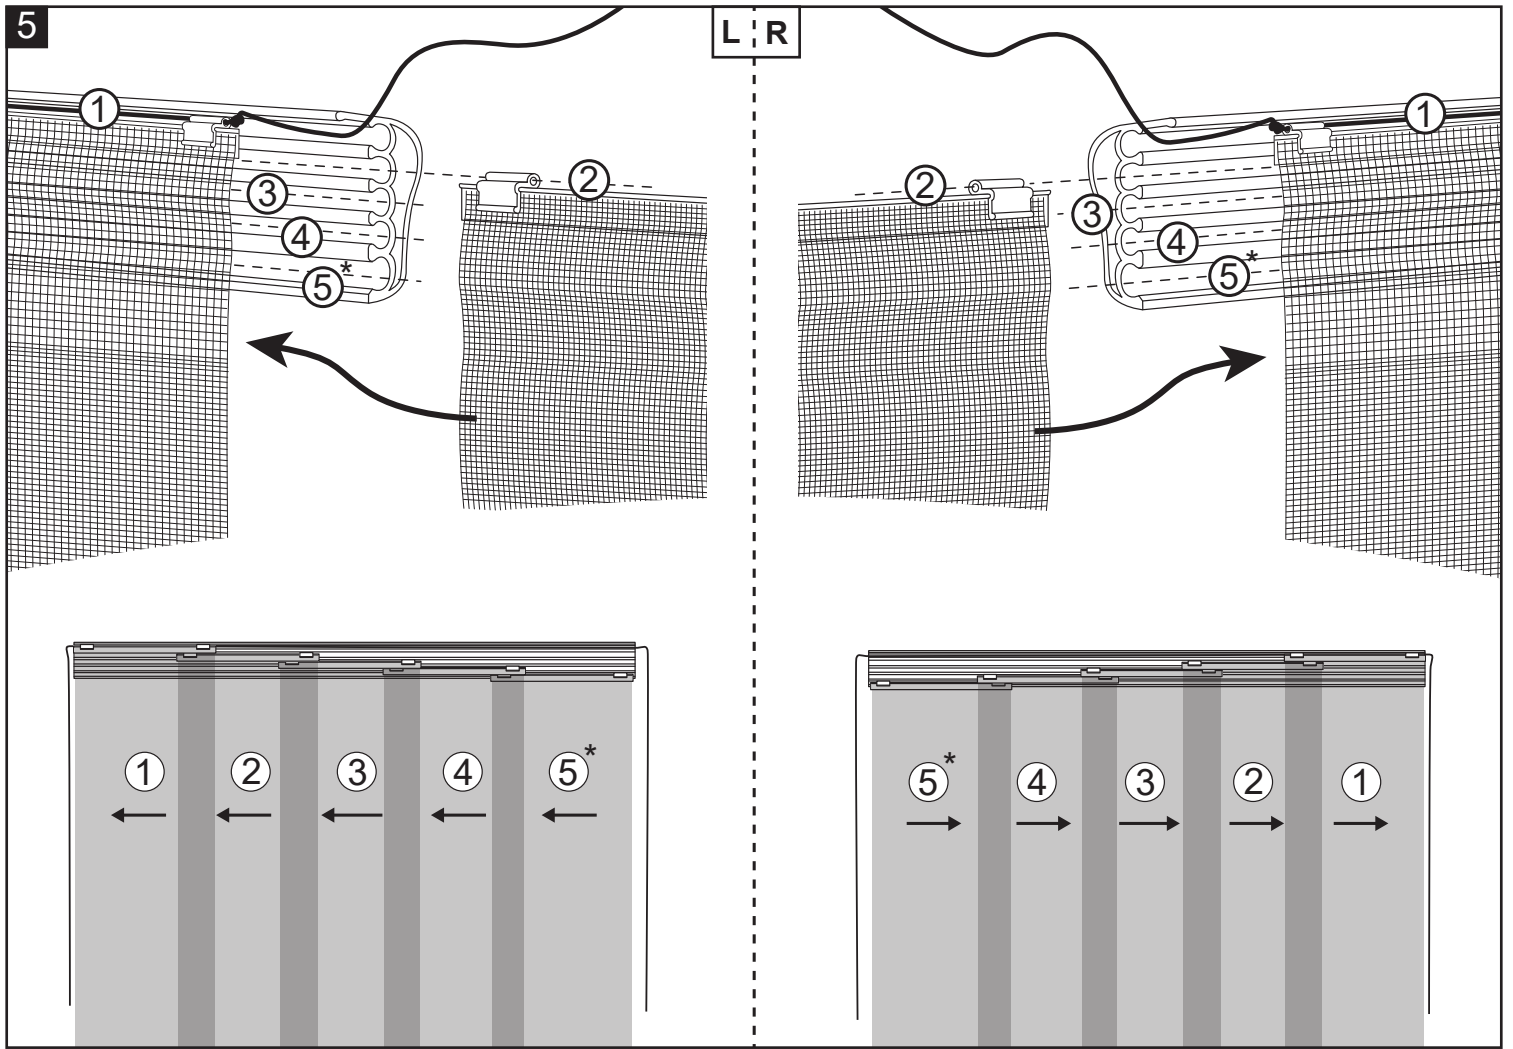  



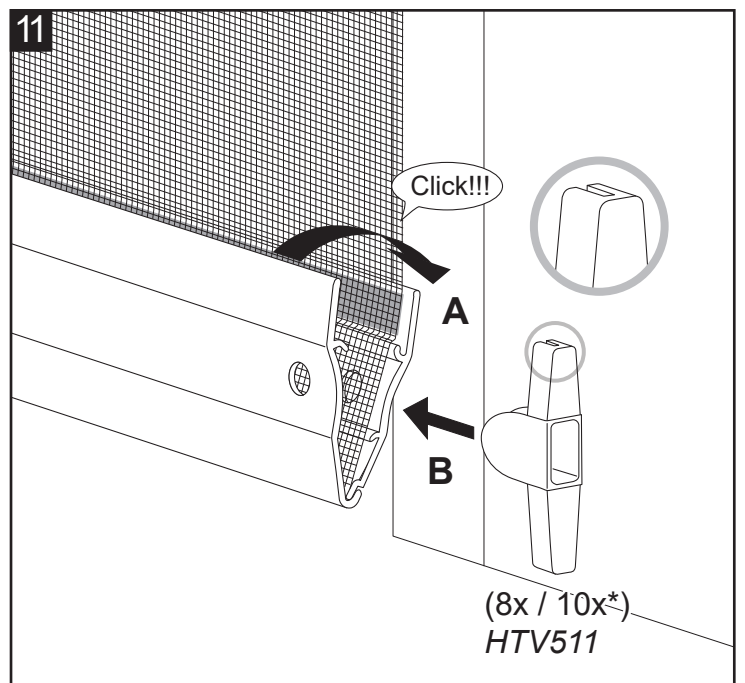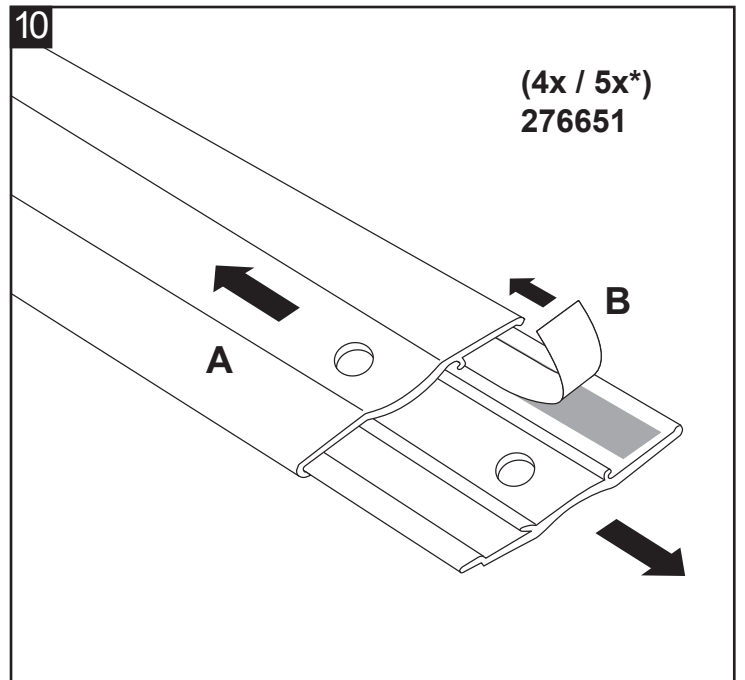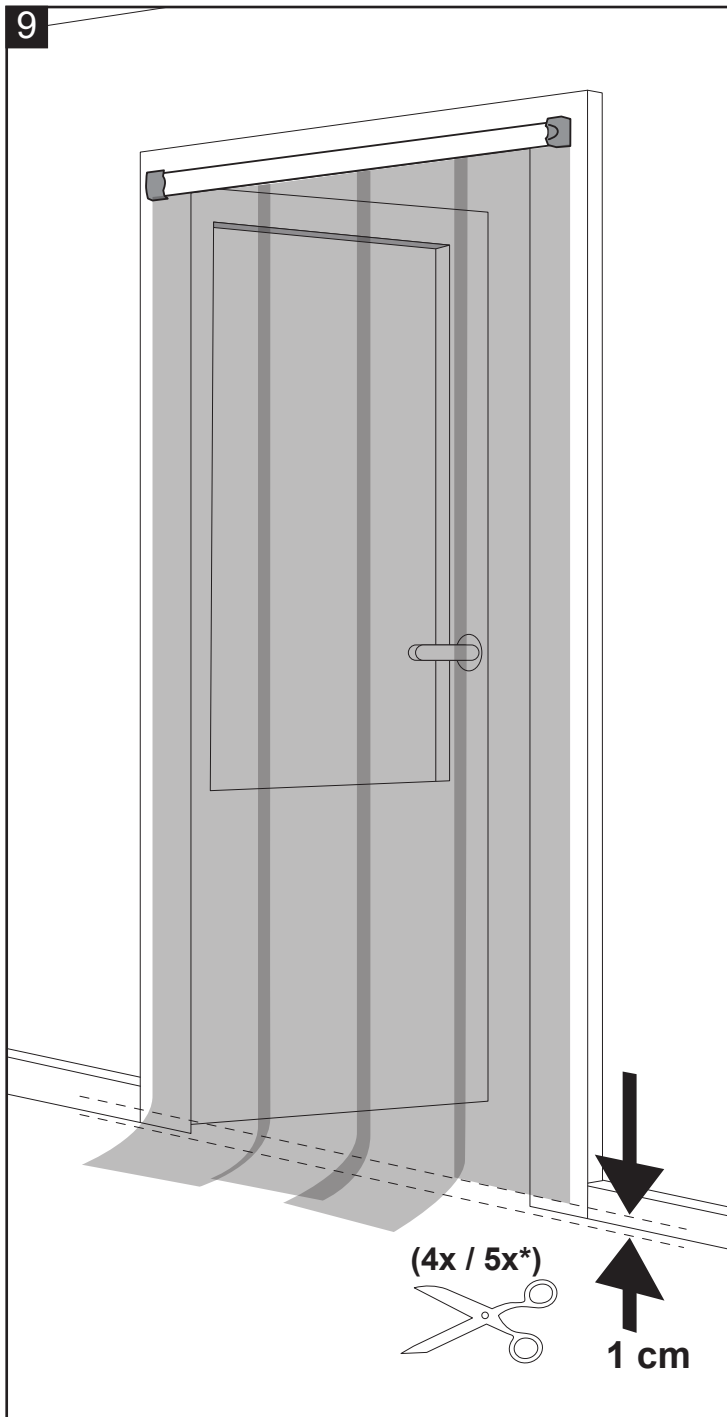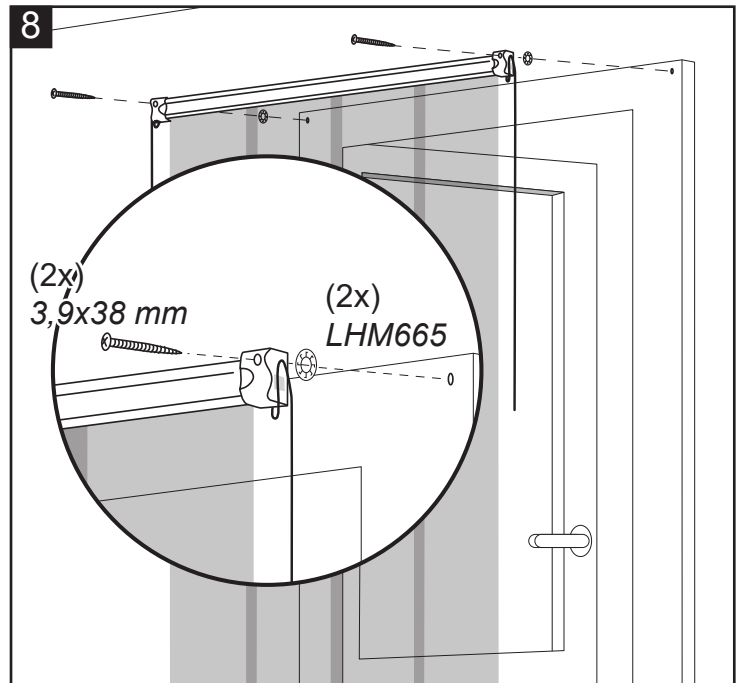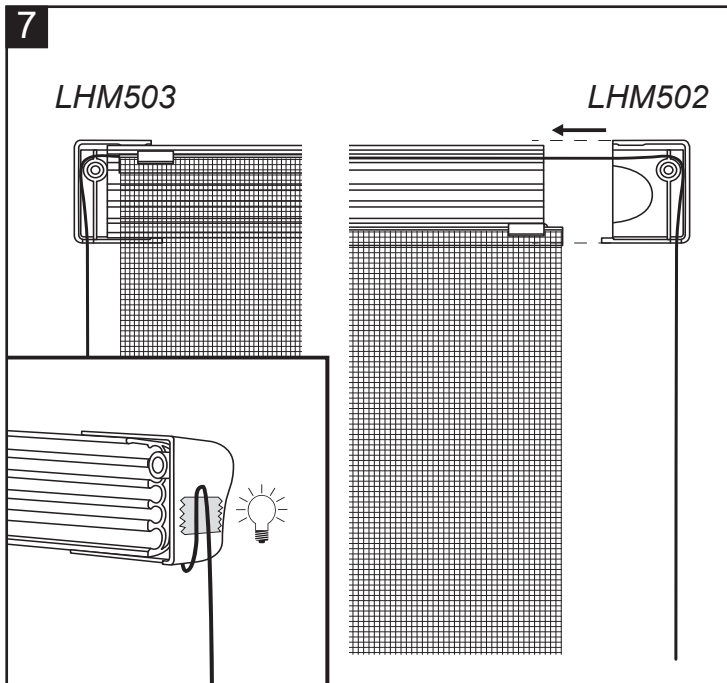       

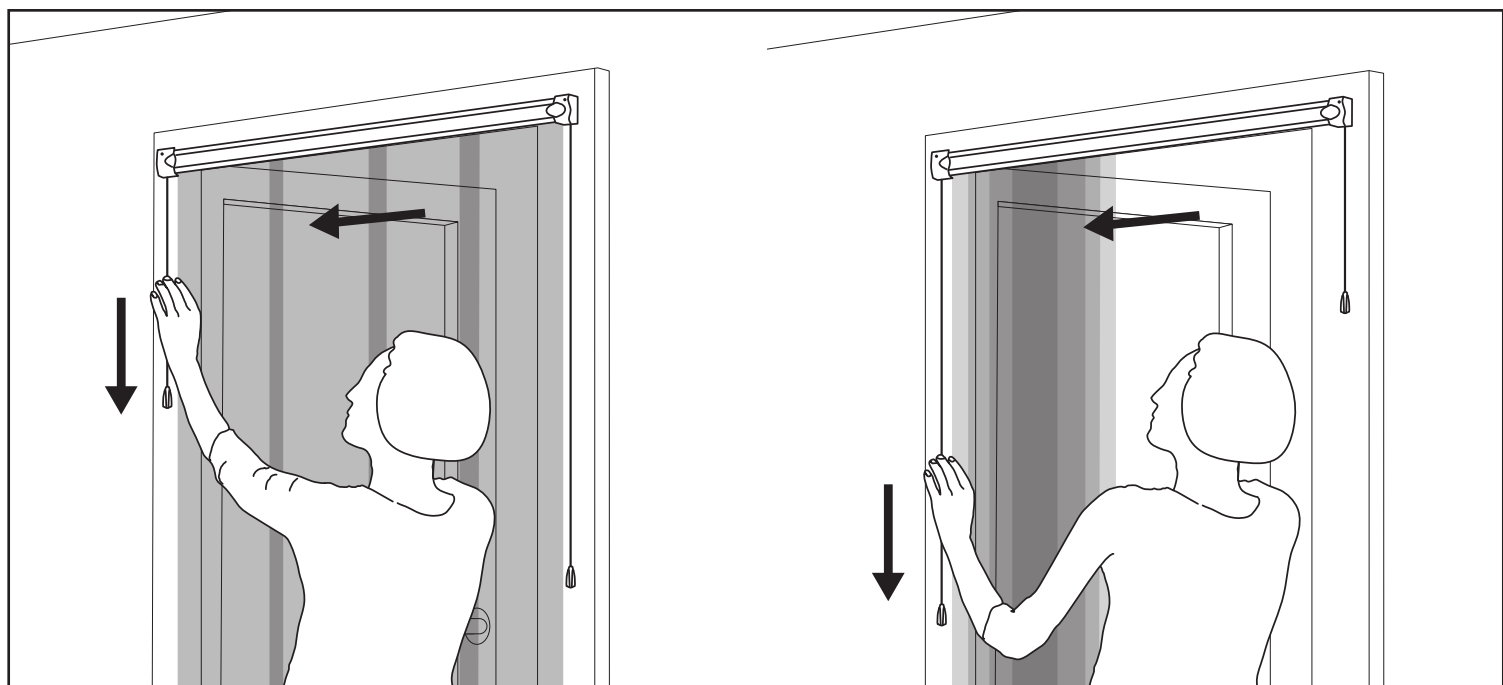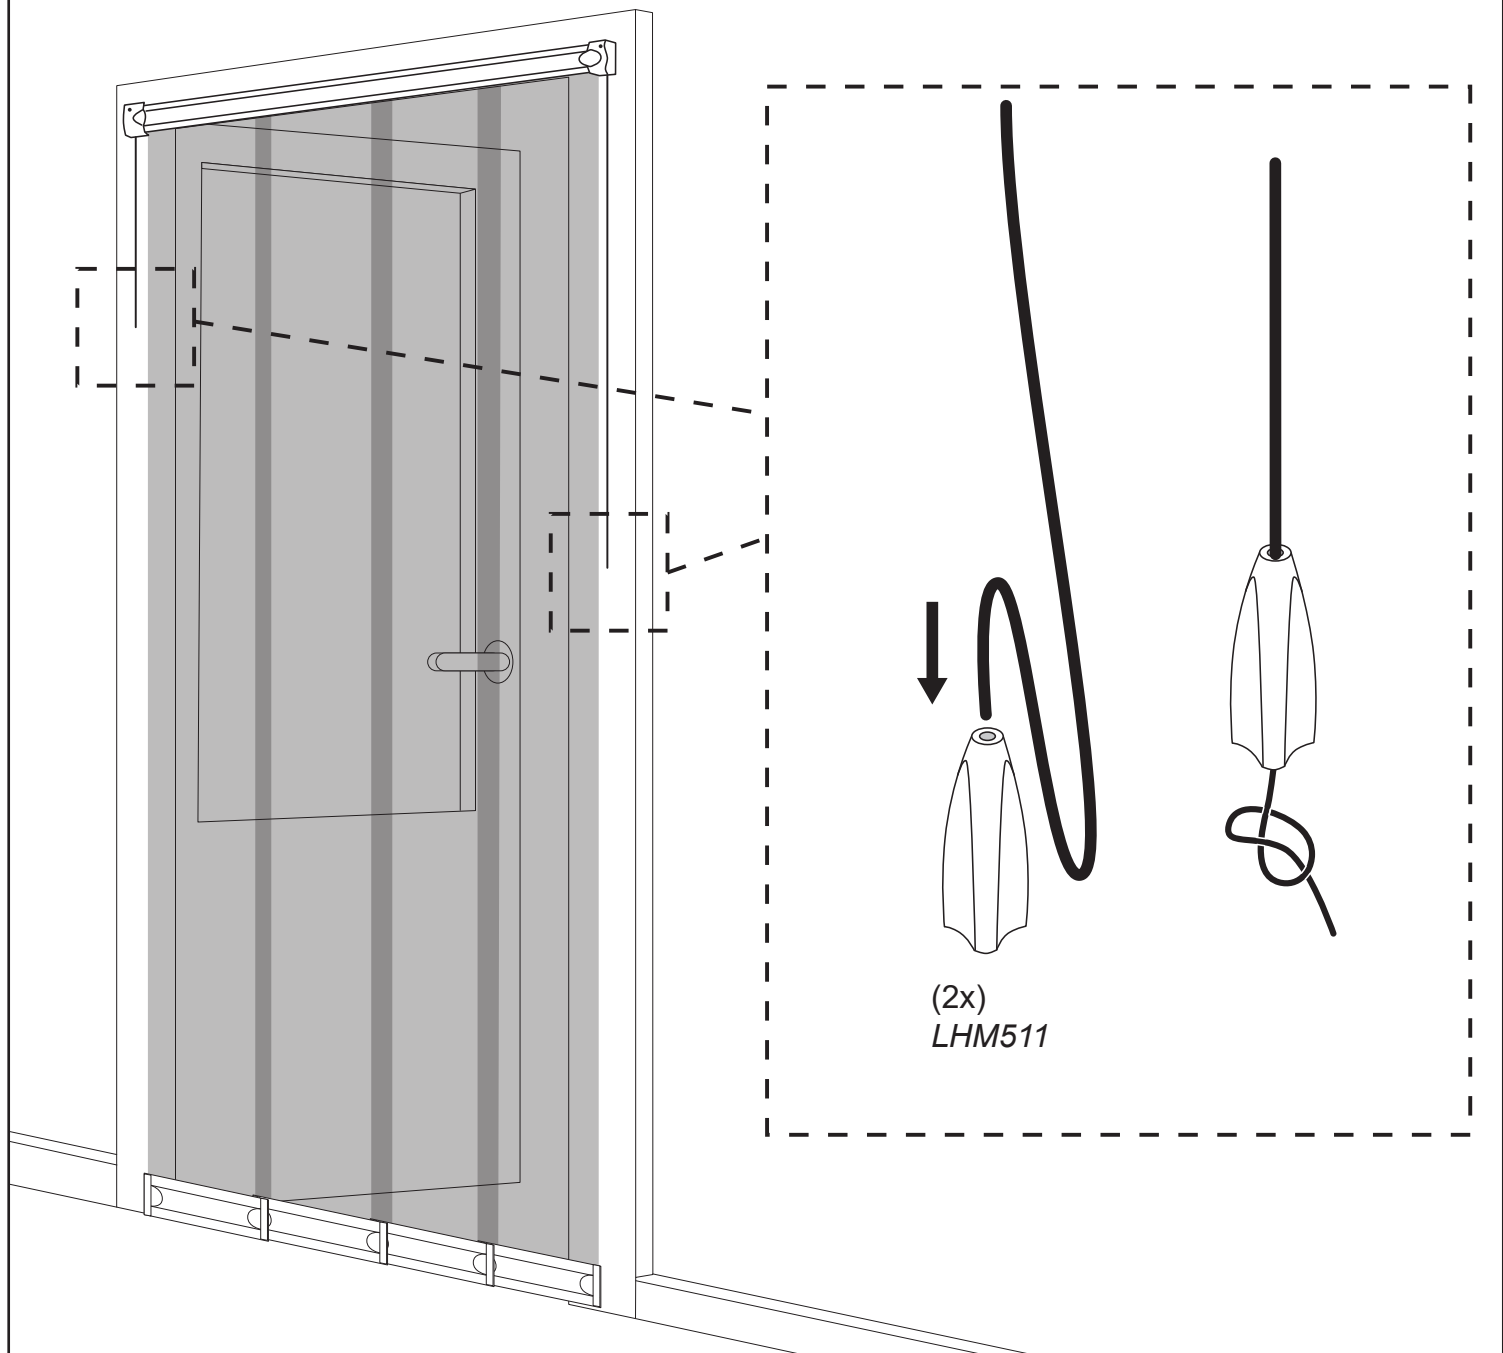

**Service**

**LHG7611**



**276651**



**276653**

